


ZIP System Tape Gun

Tape Gun Parts

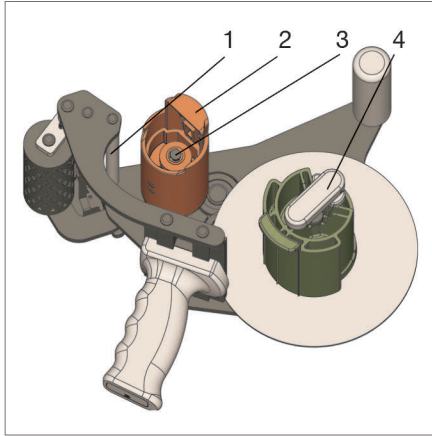

1. Tension Rod
2. Take-Up Reel
3. Tension Adjustment Knob
4. Loading Handle


Note: The ZIP System tape gun may only be used to apply the 3.75" ZIP System tape. The 6" ZIP System tape may be applied by hand, but the ZIP System corner/valley tool and/or the ZIP System tape gun pressure roller should be used after tape installation to apply pressure to the tape ensuring a quality seal and minimizing wrinkles.




Corner/Valley Tool Usage: For use with ZIP System Tape Installation in valleys and corners.




Tape Gun Loading

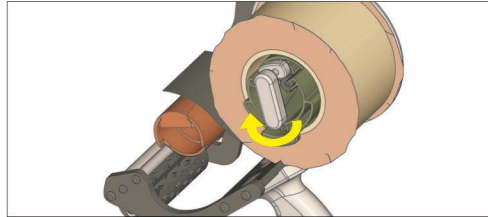


1. Place roll of tape on green spool with black side of tape facing up. Turn gray loading handle clockwise to secure tape.

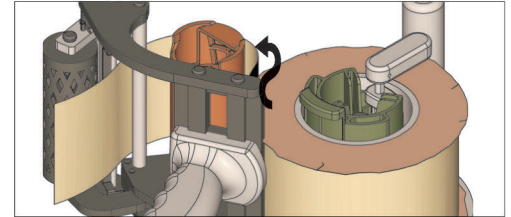


2. With liner facing down, feed tape over orange liner take-up reel and steel tension rod.

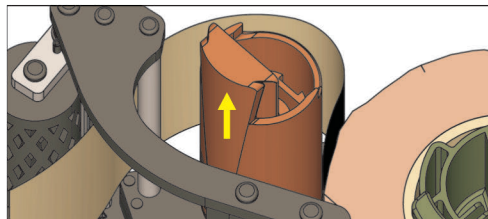


3. Pull up orange take-up reel handle.

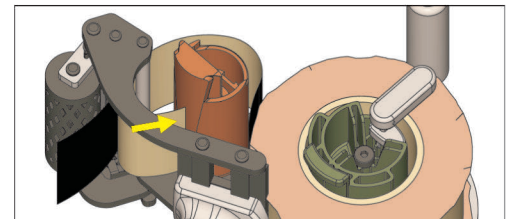

4. Separate liner from tape and slide liner into the farthest slot in the take-up reel.

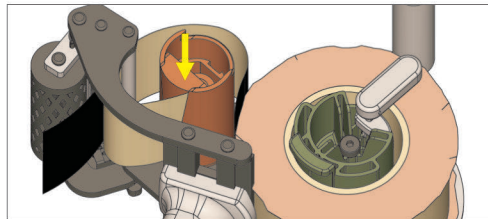


5. Push take-up reel handle back in place to secure.

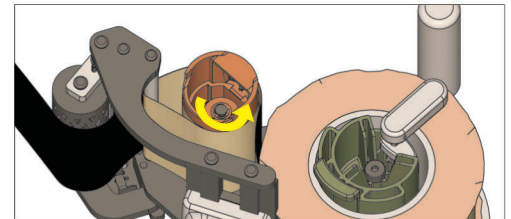


6. Turn take-up reel counter-clockwise to take up the slack. You are ready to tape.

Tape Application & Cutting

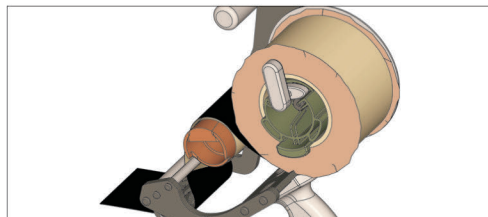


You must apply adequate **pressure** when applying tape to ensure a quality seal. If pressure is inadequate, you will hear a clicking sound. Use a utility knife to cut the tape.

Tape Gun Tension Adjustment

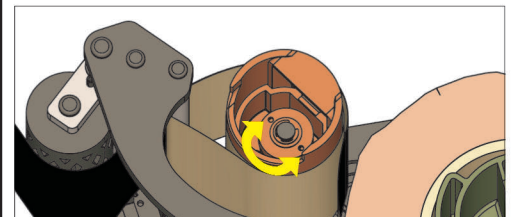


Place needle-nosed pliers into the two small holes on the Tension Adjustment Knob, to tighten turn clockwise. To release tension, turn in a counter-clockwise direction.

Tape Gun Unloading

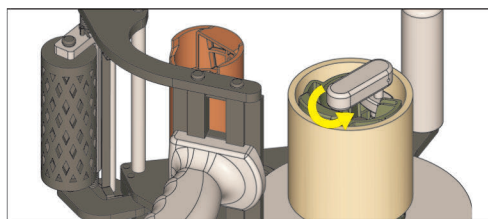

1. To remove empty tape spool, turn gray loading handle counter-clockwise and pull off spool.

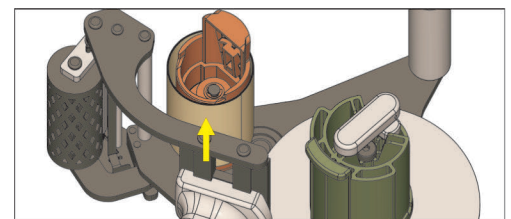

2. To remove liner, pull out handle of orange liner take-up reel and pull off liner.